



➤ Dimensions (mm)


HPR-PF-75SW/RD

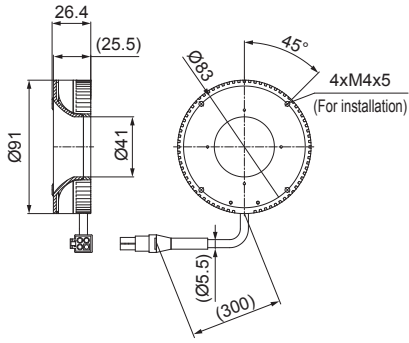


HPR-PF-100SW/RD

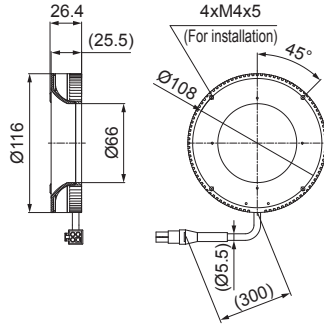


■ How to Connect the Extension Cables For HPR-PF-75 / 100

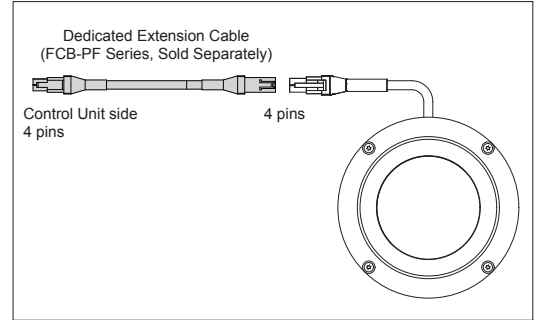

HPR-PF-150SW/RD

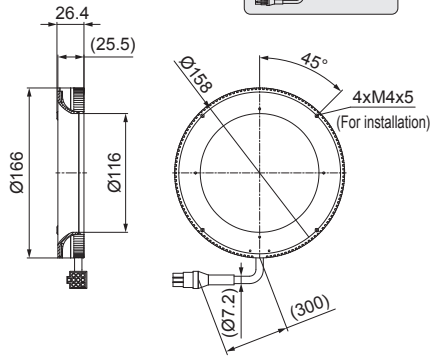

HPR-PF-200SW/RD

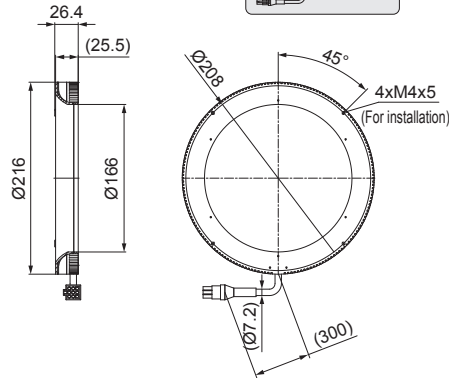

■ How to Connect the Extension Cables For HPR-PF-150 / 200

